




How to get the right tension?

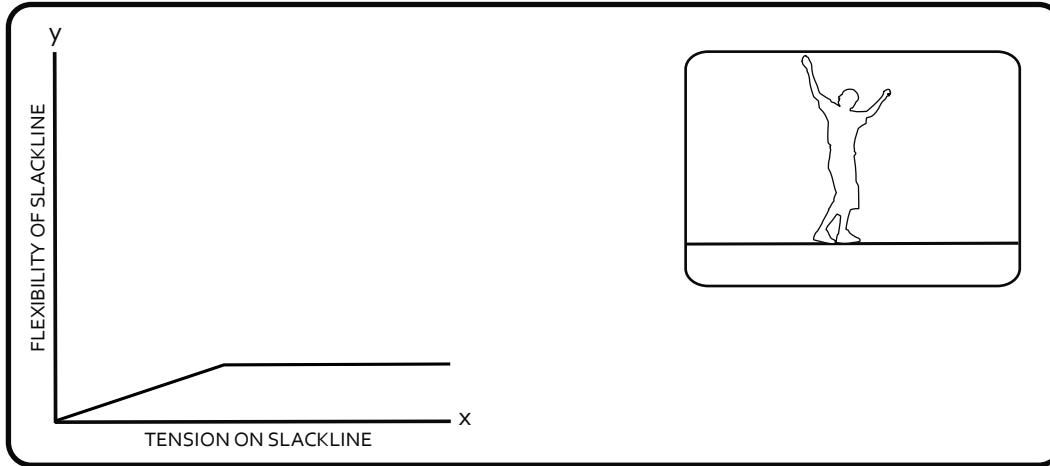

TOO HARD

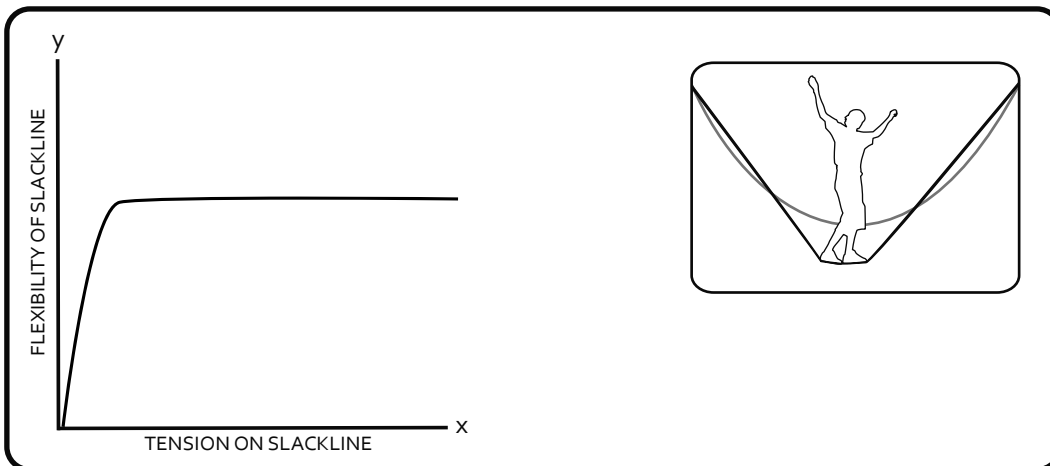

RODEO LINE

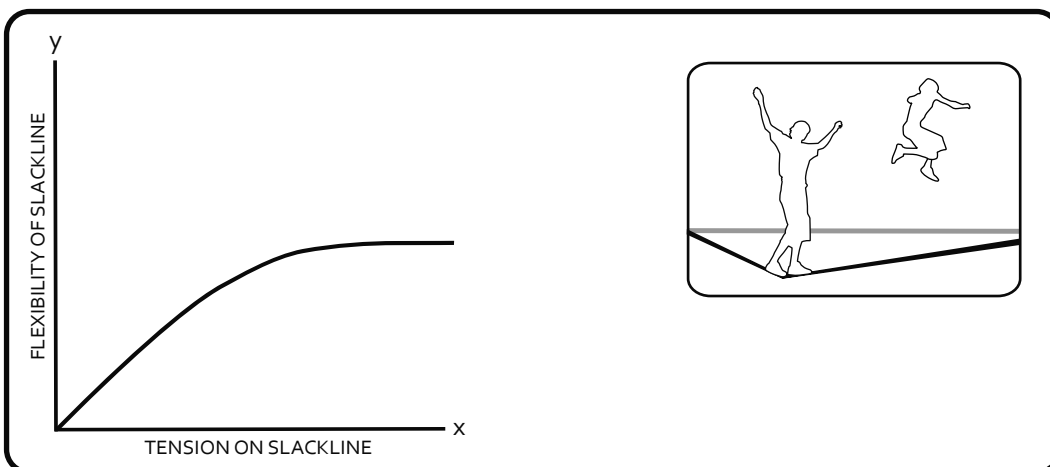

IDEAL SETUP